

# 06

## Tupfer- und Kornzangen

---

Cotton swap forceps

---

Pinces à tampons et à pansements


---

Pinzas para tapones y curaciones

---

Pinze per tamponi e per medicazione

---

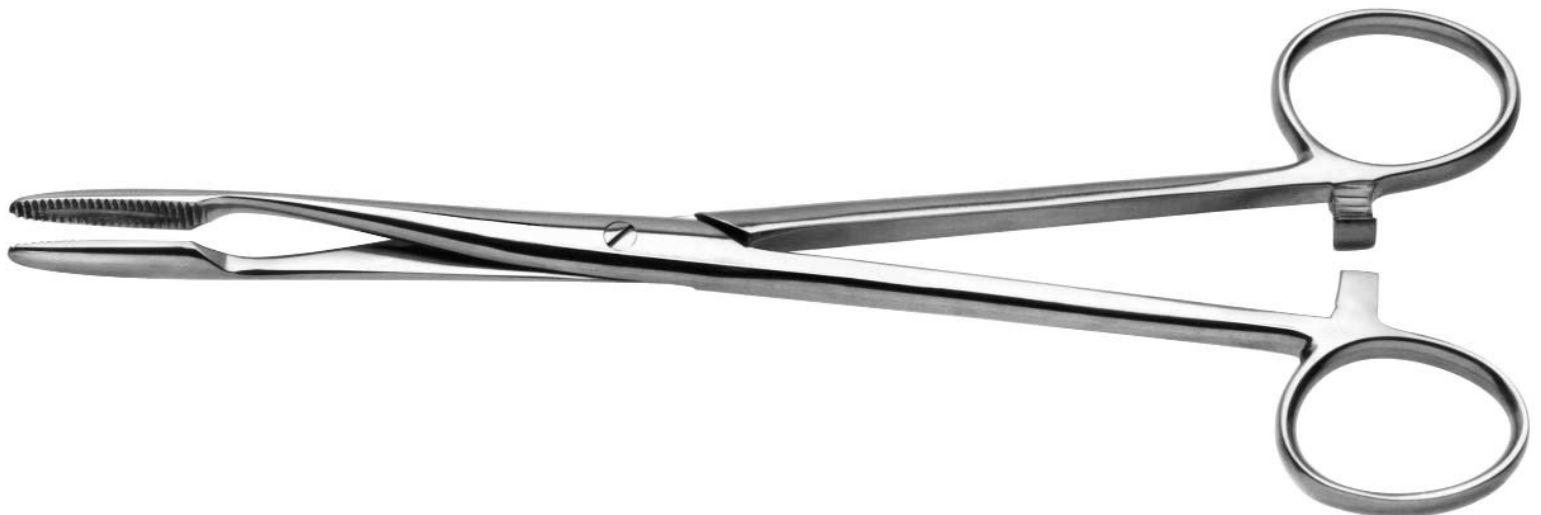

# Tupfer- und Kornzangen

## Cotton swap forceps



### Kornzangen

*Polypus and dressing forceps*

*Pinces à polypes et à pansements*


*Pinzas para pólipos y vendajes*

*Pinze per medicazione e polipi*

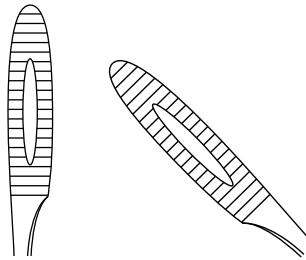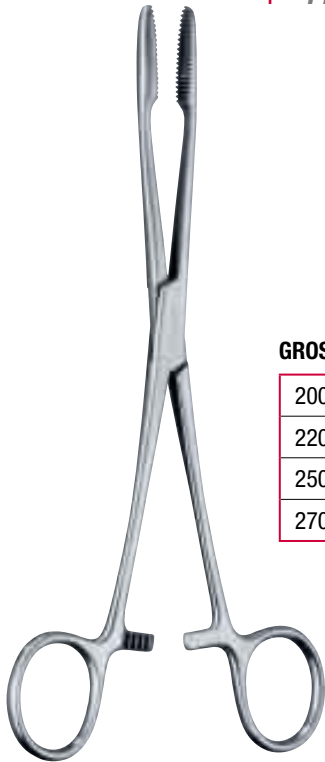



#### GROSS-MAIER

200 mm – 8"	16-022-200	16-023-200
220 mm – 8¾"	16-022-220	16-023-220
250 mm – 9¾"	16-022-250	16-023-250
270 mm – 10¾"	16-022-270	16-023-270

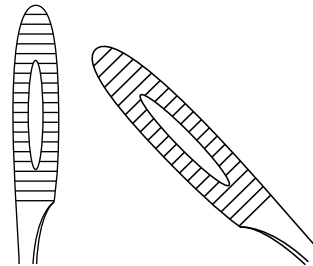

#### MAIER

200 mm – 8"	16-020-200	16-021-200
250 mm – 9¾"	16-020-250	16-021-250

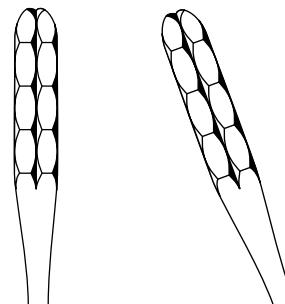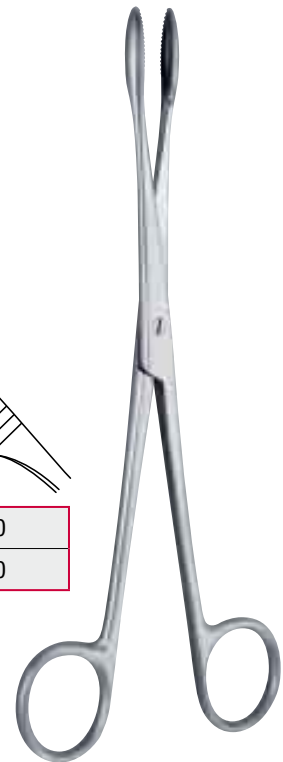


#### ULRICH

220 mm – 8¾"	315-156-220	315-157-220
250 mm – 9¾"	315-156-250	315-157-250
270 mm – 10¾"	315-156-270	315-157-270

**Schwammzangen**
*Sponge holding forceps*
*Pinces à éponges*
*Pinzas para esponjas*
*Pinze per tamponi*

**RAMPLEY**

180 mm – 7"	315-176-180	
250 mm – 9¾"	315-176-250	315-177-250

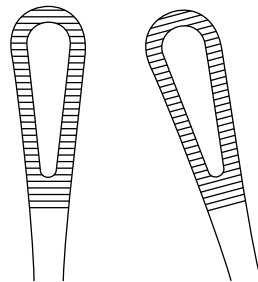
**COLLIN** 1:1

250 mm – 9¾"
315-216-250



1:2


# Tupfer- und Kornzangen

## Cotton swap forceps

**Schwammzangen**  
*Sponge holding forceps*  
*Pinces à éponges*  
*Pinzas para esponjas*  
*Pinze per tamponi*



1:2




1:1

**CHERON**


250 mm – 9¾"	16-102-250
--------------	------------



1:2



1:1

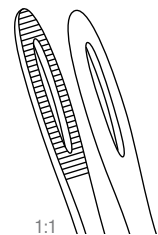

1:1

**FOERSTER-  
BERGMANN**

250 mm – 9¾"	315-170-250	315-171-250
--------------	-------------	-------------

**Schwammzangen**  
*Sponge holding forceps*  
*Pinces à éponges*  
*Pinzas para esponjas*  
*Pinze per tamponi*



**FOERSTER  
(BALLENGER)**

180 mm – 7"	16-140-180	16-142-180	16-143-180	16-145-180
200 mm – 8"	16-140-200	16-142-200	16-143-200	16-145-200
250 mm – 9¾"	16-140-250	16-142-250	16-143-250	16-145-250

# Tupfer- und Kornzangen

## Cotton swap forceps

06

### Schwammzangen

Sponge holding forceps

Pinces à éponges

Pinzas para esponjas

Pinze per tamponi




**BOZEMANN** 1:1

260 mm – 10 ¼ "

16-121-260

**S-förmig gebogen**  
S-curved  
courbe en S  
curva en S  
curve a forma di S

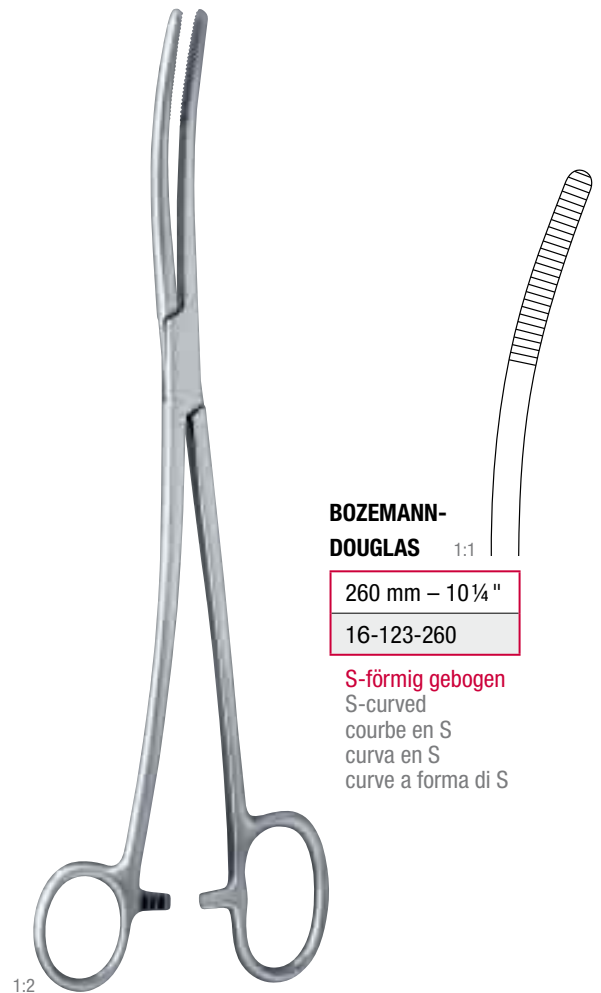

**BOZEMANN-  
DOUGLAS** 1:1

260 mm – 10 ¼ "

16-123-260

**S-förmig gebogen**  
S-curved  
courbe en S  
curva en S  
curve a forma di S

### Kornzangen – Schwammzangen

*Polypus and dressing forceps – Sponge holding forceps*

*Pinces à polypes et à pansements – à tampons et éponges*

*Pinzas para pólipos y vendajes – para tapones y esponjas*


*Pinze per medicazione e polipi – Pinze per tamponi*



1:2

#### PELKMAN

250 mm – 9¾"	315-222-250	315-223-250
--------------	-------------	-------------

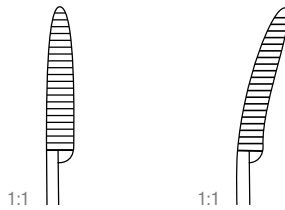


gebogen  
 curved  
 courbes  
 curva  
 curve



#### MARTIN

170 mm – 6¾"	315-240-170	315-241-170
255 mm – 10"	315-240-250	315-241-250

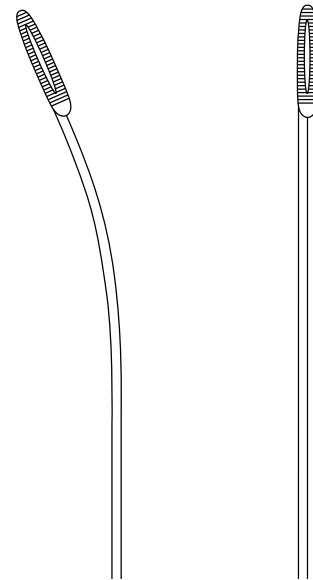

# Tupfer- und Kornzangen

## Cotton swap forceps

### Kornzangen – Schwammzangen

*Polypus and dressing forceps – Sponge holding forceps*

*Pinces à polypes et à pansements – à tampons et éponges*

*Pinzas para pólipos y vendajes – para tapones y esponjas*

*Pinze per medicazione e polipi – Pinze per tamponi*



**BRYANT** 1:2

130 mm – 5"	315-203-130
-------------	-------------



**LISTER (SINUS)**

130 mm – 5"	315-206-130
160 mm – 6 ¼"	315-206-160
180 mm – 7"	315-206-180

### Sinusklemmen

Sinus forceps

Pinces à sinus

Pinza para el sinus

Pinze per seni



1:2

**DUPLAY**



1:1



1:1

200 mm – 8"	315-242-200	315-243-200
-------------	-------------	-------------